

Noah Knock Down

collapsible bird home

Assembly instructions for the Noah Knock Down

Richtlijnen voor de montage van de Noah Knock Down

Instructions pour le montage de la Noah Knock Down

Aufbau-Anleitung des Noah Knock Down

Instrucciones de montaje de la Noah Knock Down

инструкция по сборке Noah Knock Down



www.savic.be

Ringlaan 10 • B-8501 Heule • Belgium

Tel. +32 56 35 33 45 • Fax +32 56 35 77 30

info@savic.be

Doc.nr.: 931197

SAVIC[®]
pets' favourite

Savic would like to thank you for your purchase and confidence in our Noah Knock Down cage. We can assure you that you have acquired a high quality bird cage.

Please take a few minutes to read your instructions fully to ensure perfect flawless assembly of your Noah Knock Down cage.

Check that you have all the contents as per the list on the following page. If any component parts are missing or damaged, do not use your cage.


THE NOAH KNOCK DOWN BOX CONTAINS:

- 1 plastic base (a)
- 1 back panel (b)
- 1 front panel with door (c)
- 2 side panels (d)

- 3 wooden perches (e)
- 4 side profiles - 512 mm (f)
- 2 feeding bowls (g)
- 4 bottom corner pieces (h)

More parts on following page



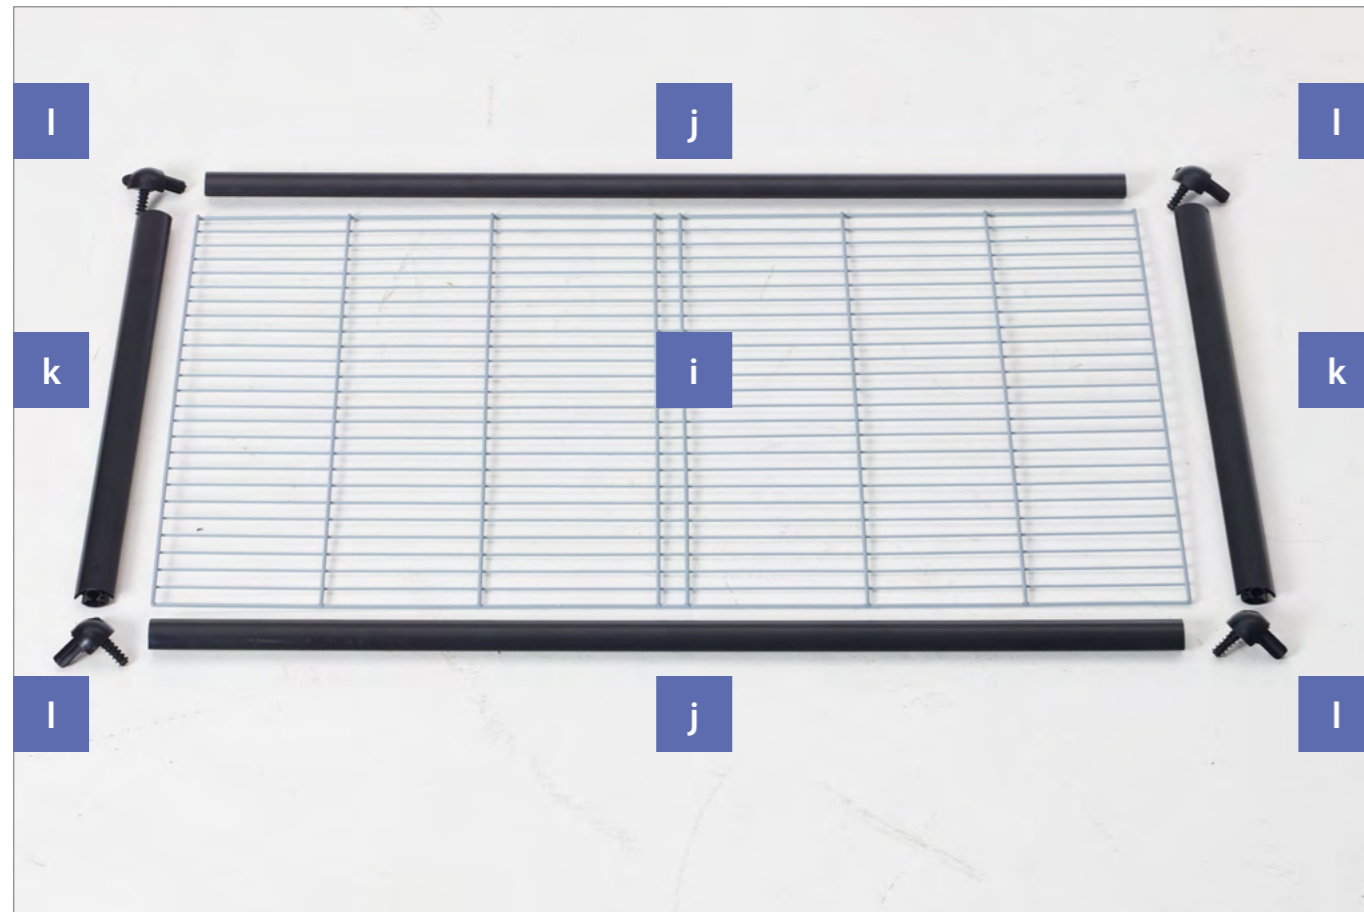

The Noah knock down box contains:

- 1 roof panel - 740 x 50 mm (i)
- 2 roof profiles - 740 mm (j)
- 2 roof profiles - 440 mm (k)
- 4 top corner pieces (l)



Attach on one side of a roof profile - 740 mm (j) a top corner piece (l). Attach on the other side of the corner piece a roof profile - 440 mm (k) as show in picture 1 a & b.



Make sure that the grooves of the panels are facing inwards as shown on picture 1 d.



Slide the roof panel into the roof profiles. Make sure the thick vertical wires are facing downwards. Attach another top corner piece on the other side of the short roof profile.



Slide the remaining roof profile - 774 mm over the roof panel and attach a corner piece.



Finally, slide the last roof profile - 440 mm over the roof panel and attach the last top corner piece. The roof of the bird cage is now installed.



Attach 2 side profiles of 512 mm (f) on the roof. Slide the back panel (b) into those 2 profiles. Make sure that the vertical wires of the panel are facing outwards.




Assemble the 2 remaining side profiles (f) on the roof.



Slide the 2 side panels (d) in the vertical profiles on both sides. Make sure that the closures are facing outwards. Finally, slide the front panel in the vertical profiles. Make sure the door is facing outwards.



Fix the 4 corner pieces (h) on the vertical profiles.

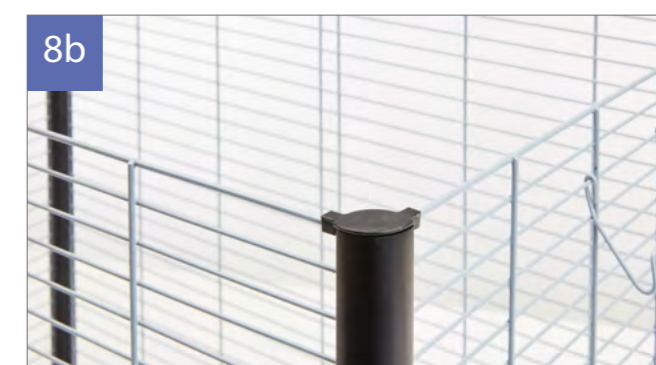

The wire part of your cage is now assembled. Turn the wire part upside down and put in on the plastic tray.



Install the accessories and your cage is now ready for use.

www.savic.be

Ringlaan 10 • B-8501 Heule • Belgium
Tel. +32 56 35 33 45 • Fax +32 56 35 77 30
info@savic.be
Doc.nr.: 931197

SAVIC[®]
pets' favourite